

Handmixer
SB4433

EN/NL

SB
Always there.

English

Description



1. Main body (Engine section)
2. Attachment removal button
3. On / Off and 5-steps variable speed switch
4. Turbo switch
5. Beating attachments
6. Kneading attachments

English

SAFETY INSTRUCTIONS

- Read the instructions for use carefully before using your appliance for the first time: the manufacturer shall not accept any liability in the event of any use that does not comply with the instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- To prevent harming your appliance do not use extension cords that supply insufficient current.
- Do not place your appliance over or near direct heat sources such as hot gas, electric burner, or heating oven.
- Do not let cord hang over edge of a table or counter, or touch any other appliances.
- NEVER immerse the main part of your mixer in water or any other liquid.
- Immediately unplug your appliance after getting wet in any manner.
- ALWAYS unplug your appliance from outlet when not in use, or before putting in or taking out attachments, or before caring and cleaning.
- Do not operate the mixer with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner, such as by dropping down, etc. Do not attempt to repair it by yourself. Call immediately SB Electronics Authorized Service.
- NEVER attach to your appliance any attachments belonging to other appliances.
- Avoid actions that may harm or damage the cord or plug of your mixer.
- Do not carry your appliance by holding from the cord. To unplug, hold the plug and do not pull by the cord.
- Do not operate the beating or kneading nozzles inside an empty receptacle or outside the receptacle. Your appliance can be damaged.
- Avoid from touching any moving parts when in use. •Do not keep your hands, hairs, clothes, or any tools closer.
- Before rinsing, always take any attachments out of the mixer.
- In order to avoid from overheating of your mixer's engine operate dough-kneading nozzles in a lower speed or position 2.
- Do not use your mixer for blending flaring or combustible materials other than foods.
- Do not interfere with your mixer except for the purposes of cleaning and maintenance.
- Use your appliance for its intended purposes as recommended.



NEVER immerse the main body of your Mixer Machine in water or any other liquid. Immediately unplug your device if it gets wet in any way.

English



BEFORE USING FOR THE FIRST TIME

- Check that voltage indicated on the rating label corresponds the mains voltage in your home.
- Wash the accessories (beating attachments, kneading attachments) with soapy water. Rinse and then dry carefully.
- Before plug in, ensure the ON/OFF switch is in “OFF” position.

YOUR SB ELECTRONICS MIXER IS COMPOSED OF THE FOLLOWING ATTACHMENTS WITH 2 DIFFERENT FUNCTIONS.

- While beating or kneading if you want to add new materials, get the speed first level and then increase the speed gradually.
- When you have finished your work set the variable speed switch to the position “ 0 ” (off) and then press the apparatus removing button in order to detach the apparatuses.



WARNING: Do not operate kneading and beating nozzles continuously for more than 3 minutes. After such time allow the engine of your appliance to cool down.

SETTING THE SPEED

We recommend you to use the following speed adjustments in order to obtain best results from the mixtures you prepare.

OFF

0

Low

1 For mixing liquids and dry materials, beating butter and sugar

2 For preparing sauce, pudding, and crepe dough

Medium

3 For preparing liquid dough, beating butter and sugar, and preparing dough for cookies and cakes.

High

4-5 For preparing frothy, light dough (lump of dough) and cream, beating eggs (white, yolk; white + yolk), mashing stewed potatoes, making puree

English

Turbo Switch

- Turbo switch may be used at any times, without looking at the variable speed switch. (Except for the status 0)
- In TURBO position, you can operate your mixer at the highest speed for a few seconds.
- In order to avoid damaging to your mixer and its engine due to overheating do not use TURBO position for more than 1 minute continuously. After such time, allow the engine of your appliance to cool down.

BEATER AND KNEADIG ATTACHMENTS USAGE

Approximate usage time: 3 minutes

1. Suitable for mixing egg whites, cream, instant desserts, eggs, sugar and other soft ingredients.
2. Mount the whisk on the appliance and lock it securely.
3. Place the food in a deep bowl.
4. Plug in the power supply and the On / Off and 5-steps variable speed switch button to start mixing.
5. After use, press attachment removal button and separate the beater or kneading attachments from the motor body.

CLEANING AND MAINTENANCE

- Unplug your device.
- Wipe the motor body with a damp cloth. Never wash the motor body in running water (tap, tap) or in the dishwasher.
- Do not wash any accessories in the dishwasher.
- After each use, clean your device and the accessories you use and dry them thoroughly.

Nederlands

Beschrijving



1. Hoofdunit (motorgedeelte)
2. Ontgrendelknop voor opzetstuk
3. Aan/Uit- en 5-traps variabele snelheidschakelaar
4. Turbo-schakelaar
5. Klopgarde
6. Kneedgarde

Nederlands

VEILIGHEIDSINSTRUCTIES

- Lees deze handleiding volledig door vóór eerste gebruik. De fabrikant is niet aansprakelijk bij onjuist gebruik.
- Niet gebruiken door personen (incl. kinderen) met beperkte fysieke, zintuiglijke of mentale vermogens, of zonder ervaring/kennis, tenzij onder toezicht of met instructies van een verantwoordelijke.
- Houd toezicht op kinderen om te voorkomen dat zij met het apparaat spelen.
- Gebruik geen verlengsnoeren die onvoldoende stroomsterkte leveren, om schade aan het apparaat te voorkomen.
- Plaats het apparaat niet op of bij hittebronnen (gas, elektrisch fornuis, oven).
- Laat de snoer niet hangen of hete oppervlakken raken.
- Dompel het hoofdgedeelte van de mixer **nooit** in water of andere vloeistoffen.
- Wordt het apparaat nat, trek dan direct de stekker uit het stopcontact.
- Trek **altijd** de stekker uit het stopcontact wanneer u het apparaat niet gebruikt, voordat u opzetstukken plaatst of verwijdert, en vóór onderhoud of schoonmaken.
- Gebruik het apparaat **niet** met een beschadigde snoer/stekker, of na vallen/schade. Niet zelf repareren, maar contact opnemen met SB Electronics.
- Gebruik alleen originele accessoires.
- Vermijd handelingen die de snoer of stekker van uw mixer kunnen beschadigen.
- Beschadig de snoer/stekker niet, draag het apparaat nooit aan de snoer, trek altijd aan stekker.
- Klop- of kneedhaken nooit in een lege kom of buiten een kom gebruiken.
- Raak geen bewegende delen aan, houd handen, haar, kleding en gereedschap op afstand.
- Verwijder accessoires vóór afspoelen.
- Gebruik deeghaken op lage snelheid (stand 2) om oververhitting te voorkomen.
- Niet gebruiken voor brandbare of ontvlambare stoffen, alleen voor voedsel.
- Voer geen handelingen uit aan de mixer, behalve voor schoonmaak en onderhoud.
- Gebruik het apparaat alleen voor de aanbevolen doeleinden.



Dompel het hoofdgedeelte van uw mixer **NOOIT** in water of andere vloeistoffen. Trek direct de stekker uit het stopcontact als het apparaat op welke manier dan ook nat wordt.

Nederlands



VOOR HET EERSTE GEBRUIK

- Controleer of de op het typeplaatje aangegeven spanning overeenkomt met de netspanning in uw huis.
- Was de accessoires (klopaccessoires, kneedaccessoires) in warm sop, spoel ze af en droog zorgvuldig.
- Zorg dat de Aan/Uit-schakelaar in de stand "OFF" staat voordat u de stekker in het stopcontact steekt.

UW SB ELECTRONICS-MIXER BESTAAT UIT DE VOLGENDE OPZETSTUKKEN MET 2 VERSCHILLENDE FUNCTIES.

- Wilt u tijdens het kloppen of kneden ingrediënten toevoegen, zet dan eerst de snelheid op de laagste stand en verhoog de snelheid daarna geleidelijk.
- Zet na gebruik de variabele snelheidsknop op stand "0" (uit) en druk vervolgens op de ontgrendelknop om de accessoires los te maken.



WAARSCHUWING: Gebruik de kneed- en klopaccessoires niet langer dan 3 minuten achter elkaar. Laat daarna de motor van het apparaat afkoelen.

SNELHEID INSTELLEN

Aanbevolen snelheidsinstellingen voor beste resultaten:

OFF

0

Laag

1 Voor het mengen van vloeistoffen en droge ingrediënten, boter en suiker kloppen

2 Voor saus, pudding en pannenkoekenbeslag

Gemiddeld

3 Voor vloeibaar beslag, boter en suiker kloppen, koek- en cakedeeg maken

Hoog

4-5 Voor luchtig beslag, slagroom, eieren kloppen (wit, geel of beide), aardappelpuree maken

Nederlands

Turbo-schakelaar

- De turbo-schakelaar kan op elk moment worden gebruikt, ongeacht de stand van de variabele snelheidsknop (behalve bij stand 0).
- In de TURBO-stand werkt de mixer enkele seconden op de hoogste snelheid.
- Gebruik de TURBO-stand niet langer dan 1 minuut achter elkaar om oververhitting en schade aan de motor te voorkomen. Laat daarna de motor afkoelen.


GEBRUIK VAN KLOP- EN KNEEDACCESSOIRES

Geschatte gebruiksduur: 3 minuten

7. Geschikt voor het mixen van eiwitten, slagroom, instantdesserts, eieren, suiker en andere zachte ingrediënten.
8. Plaats de garde op het apparaat en vergrendel deze stevig.
9. Doe de ingrediënten in een diepe kom.
10. Steek de stekker in het stopcontact en zet de Aan/Uit- en 5-standen-snelheidsschakelaar aan om te beginnen met mixen.
11. Druk na gebruik op de ontgrendelknop om de klop- of kneedaccessoires van de motorunit los te maken.

REINIGING EN ONDERHOUD

- a. Trek de stekker uit het stopcontact.
- b. Maak de motorunit schoon met een vochtige doek. Dompel deze nooit onder in water en plaats deze niet in de vaatwasser.
- c. Was geen accessoires in de vaatwasser.
- d. Reinig het apparaat en gebruikte accessoires na elk gebruik en droog alles grondig af.

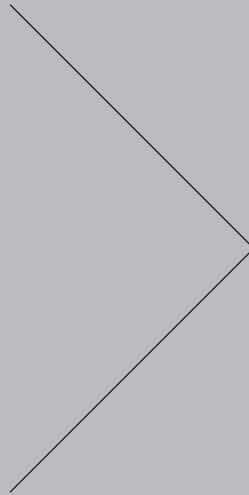

Always there.

Handmixer

SB4433



SB Electronics BV
Heescheweg 17
5388 RG Nistelrode
sbelectronics.nl